

**Anleitung: Fersenschutz Satz  
Triumph Street Triple 675**

**Instruction: Heel protector set  
Triumph Street Triple 675**

Lieferumfang:

1 x Fersenschutz rechts  
1 x Fersenschutz links  
1 x U-Scheibe M8 klein A2  
2 x Distanz 9mm hoch  
2 x Linsenkopfschraube M8x30 A2

Contents:

1 x heel protector, right  
1 x heel protector, left  
1 x small washer, M8 A2  
2 x spacer, 9 mm high  
2 x button head bolt M8x30 A2

**Achtung! Wichtige Hinweise**

**Alle Schraubverbindungen nach 50Km kontrollieren und nachziehen!  
Max. Anziehmoment für M8 9Nm laut Fahrzeughersteller!  
Achtung! Wenn Sie zusätzlich Original-Zubehör oder Zubehör anderer Hersteller montieren, sind alle Teile auf Freigängigkeit, Kollision und Passform zu prüfen!**

**Attention: important tips, explanations**

**Check all screws after 50Km and retighten if necessary! According to the vehicle manufacturer, the maximum tightening torque for M8 is 9 Nm.  
Caution! If you also wish to install original accessories or accessories from other manufacturers, check all parts to see that they move freely, do not touch other parts and fit correctly.**

**Montage:**

1. Demontieren Sie zuerst beide Original-Fersenschutze.


2. Montieren Sie den Fersenschutz rechts wie in Bild1 mit den Original-Schrauben. Anziehen mit maximal 9Nm!

**Assembly:**


1. First of all remove the original heel protectors.

2. Fit the right heel protector using the original bolts as shown in Fig. 1. Tighten to a maximum torque of 9 Nm.

1

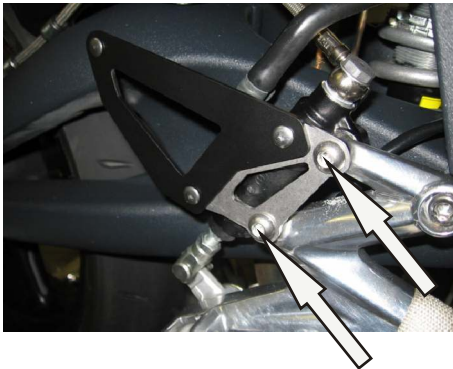

2

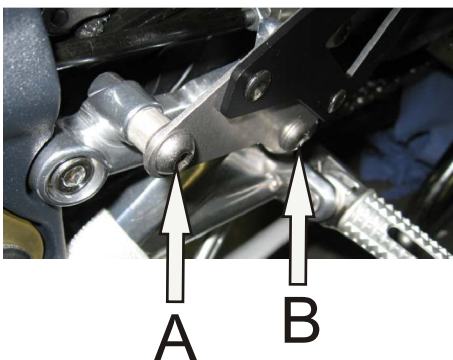

3. Montieren Sie den Fersenschutz links wie in Bild2 mit:

An (A):  
1 x U-Scheibe M8 klein A2 (als Distanz)  
1 x Distanz 9mm hoch

An (B):  
1 x Distanz 9mm hoch

Anziehen mit maximal 9Nm!

3. Fit the left heel protector as shown in Fig. 2, using

At point (A):  
1 x small washer, M8 A2 (as a spacer)  
1 x spacer, 9 mm high

At point (B):  
1 x spacer, 9 mm high

Tighten to a maximum torque of 9 Nm.